

# Kollmorgen Automation Suite

## Getting Started



Document Edition: Y, June 2024

Valid for KAS Software Revision 4.02

Part Number: 959713



For safe and proper use, follow these instructions.  
Keep for future use.

## Copyrights, Licenses, and Trademarks

### PCMM2G

The PCMM2G's Operating System (OS) and boot loader ([U-Boot](#)) are based on free and open-source software, distributed under version 3 of the GNU General Public License as published by the Free Software Foundation. For more information about your rights and obligations with GPL-3.0, see the GNU website: [GNU General Public License](#).

The individual copyright notices, license texts, and disclaimers of warranty for the software components are located in the controller, under the directory: `/usr/share/common-licenses/`.

For more information about accessing the PCMM2G's files, see [SSH Login to a Controller](#).

The OS, bootloader, and their software component's source codes including modifications, copyright notices, license texts, disclaimers of warranty, and the compilation scripts to build the OS image are available from the Kollmorgen web-site [Kollmorgen Support Network - Downloads](#).

The OS image and its corresponding sources file is identified by an "OS-Sources" designator, followed by its version number: OS-Sources-x.xx.x.xxxxx.

The compilation scripts and sources file used to build the OS image is identified by the "OS-Build-Sources" designator, followed by its version number: OS-Build-Sources-x.xx.x.xxxxx.

See [PCMM2G - File Naming Conventions](#) in the KAS online help.

### Copyrights

Copyright © 2009-2024 Regal Rexnord Corporation, All Rights Reserved.

Information in this document is subject to change without notice.

The software package described in this document is furnished under a license agreement. The software package may be used or copied only in accordance with the terms of the license agreement.

### Trademarks

Regal Rexnord and [Kollmorgen](#) are trademarks of [Regal Rexnord Corporation](#) or one of its affiliated companies.

- KAS and AKD are registered trademarks of [Kollmorgen](#).
- Codemeter is a registered trademark of [WIBU-Systems AG](#).
- EnDat is a registered trademark of Dr. Johannes Heidenhain GmbH.
- EtherCAT is a registered trademark and patented technology, licensed by Beckhoff Automation GmbH.
- Ethernet/IP Communication Stack: copyright (c) 2009, Rockwell Automation.
- Ethernet/IP is a registered trademark of ODVA, Inc.
- [Ghostscript](#) is a registered trademark of Artifex Software, Inc. and is distributed under the [AGPL](#) license.
- HIPERFACE is a registered trademark of Max Stegmann GmbH.
- [PLCopen](#) is an independent association providing efficiency in industrial automation.
- PROFINET is a registered trademark of PROFIBUS and PROFINET International (PI).
- SIMATIC is a registered trademark of SIEMENS AG.
- SyCon® is a registered trademark of [Hilscher GmbH](#).
- Windows® is a registered trademark of Microsoft Corporation.

Kollmorgen Automation Suite is based on the work of:

- [7-zip](#) (distributed under the terms of the LGPL and the BSD 3-clause licenses - [see terms](#))
- [curl](#) software library
- JsonCpp software (distributed under the MIT License – [see terms](#))
- [Mongoose](#) software (distributed under the MIT License - [see terms](#))
- [Qt](#) cross-platform SDK (distributed under the terms of the LGPL3; Qt source is available on KDN)
- [Qwt](#) project (distributed under the terms of the [Qwt License](#))
- The [C++ Mathematical Expression Library](#) (distributed under [the MIT License](#))
- [U-Boot](#), a universal boot loader is used by the AKD PDMM and PCMM (distributed under the [terms](#) of the GNU General Public License). The U-Boot source files, copyright notice, and readme are available on the distribution disk that is included with the AKD PDMM and PCMM.
- [Zlib](#) software library

All other product and brand names listed in this document may be trademarks or registered trademarks of their respective owners.

## Disclaimer

### **Technical changes which improve the performance of the device may be made without prior notice!**

This document is the intellectual property of Kollmorgen. All rights reserved. No part of this work may be reproduced in any form (by photocopying, microfilm or any other method) or stored, processed, copied or distributed by electronic means without the written permission of Kollmorgen.

The information in this document is believed to be accurate and reliable at the time of its release. Kollmorgen assumes no responsibility for any damage or loss resulting from the use of this help, and expressly disclaims any liability or damages for loss of data, loss of use, and property damage of any kind, direct, incidental or consequential, in regard to or arising out of the performance or form of the materials presented herein or in any software programs that accompany this document.

All timing diagrams, whether produced by Kollmorgen or included by courtesy of the PLCopen organization, are provided with accuracy on a best-effort basis with no warranty, explicit or implied, by Kollmorgen. The user releases Kollmorgen from any liability arising out of the use of these timing diagrams.

# Table of Contents

<b>1</b>	<b>Introduction</b>	<b>5</b>
1.1	Related Documents	5
1.2	Alerts and Warnings	5
<b>2</b>	<b>System Overview</b>	<b>6</b>
2.1	Software Packages	6
2.2	Hardware Components	7
<b>3</b>	<b>Install KAS-IDE</b>	<b>8</b>
3.1	System Requirements	8
3.2	Download	8
3.3	Installation Procedure	9
3.3.1	User Data	9
3.4	Additional Literature	10
<b>4</b>	<b>Installing KAS Runtime</b>	<b>11</b>
4.1	Update the Runtime on AKD PDMM and PCMM	11
4.1.1	AKD PDMM and PCMM File Type: .IMG	11
4.1.1.1	AKD PDMM	11
4.1.1.2	PCMM	11
4.1.1.3	Model Code	11
4.1.2	PCMM2G File Type: .ZIP	12
4.1.2.0.1	Operating System (OS) + KAS Runtime (RT)	12
4.1.2.0.2	OS Only	12
4.1.2.0.3	KAS Runtime (RT) Only	12
4.1.2.1	Model Code	12
<b>5</b>	<b>Install Hardware (HW)</b>	<b>15</b>
5.1	HMI - Graphic Operator Interface	21
5.2	Install Controllers	21
5.3	EtherCAT Motion Bus	21
5.4	Remote Input/Output - I/O Terminal	22
5.5	Install AKD Drives	24
5.6	Install AKM or AKM2G Motors	24
5.7	SafePLC2 Projects	25
<b>6</b>	<b>Updating Firmware</b>	<b>26</b>
6.1	Check AKD / AKD2G Drive Firmware with KAS-IDE	26
6.2	Download AKD PDMM Drive Firmware	26
6.2.1	Update the AKD PDMM Drive Firmware with KAS-IDE	27
6.3	AKD/AKD2G Firmware Update	27
<b>7</b>	<b>Installing Kollmorgen Visualization Builder</b>	<b>29</b>
7.1	Download	29
7.2	Installation Procedure	29
<b>8</b>	<b>Finalize Installation</b>	<b>31</b>
8.1	Test the Installation	31
<b>9</b>	<b>Troubleshooting</b>	<b>32</b>
	Support and Services	33

# 1 Introduction

This guide covers these main procedures to have your KAS system up and running:

- **Hardware (HW) Installation** (Connection and Wiring): Wiring and hardware details, connectors, system diagrams.
- **HW Configuration**: Basic configuration and settings needed to start the HW components (e.g., HMI, Industrial PC, Fieldbus, I/O).
- **Software (SW) Installation**: KAS software setup.

## 1.1 Related Documents

See the [Kollmorgen Downloads](#) page for documentation about controllers, drives, motors, and other components.

## 1.2 Alerts and Warnings

When alert symbols are seen in a manual, be aware of the potential for personal injury.

Follow the recommended precautions and safe operating practices included with the alert symbols.

- Safety notices in the manuals provide important information.
- Read and be familiar with these instructions before attempting to install, operate, or perform maintenance.
- This section alerts users to possible safety hazards associated with equipments and the precautions that need to be taken to reduce the risk of personal injury and damage to the equipment.
- Failure to observe these precautions could result in serious bodily injury, damage to the equipment, or operational difficulty.

## 2 System Overview

The Kollmorgen Automation Suite (KAS) is a complete system solution.

This includes a variety of software packages designed for complete control over your hardware.

### 2.1 Software Packages

Software	Description
KAS-IDE	The KAS Integrated Development Environment (KAS-IDE) provides all necessary tools for designing, programming, configuring, debugging, and maintaining machine applications.
KAS Runtime	The KAS Runtime engine includes a soft PLC and a motion controller.
KVB (optional)	The Kollmorgen Visualization Builder assists in designing an HMI panel.

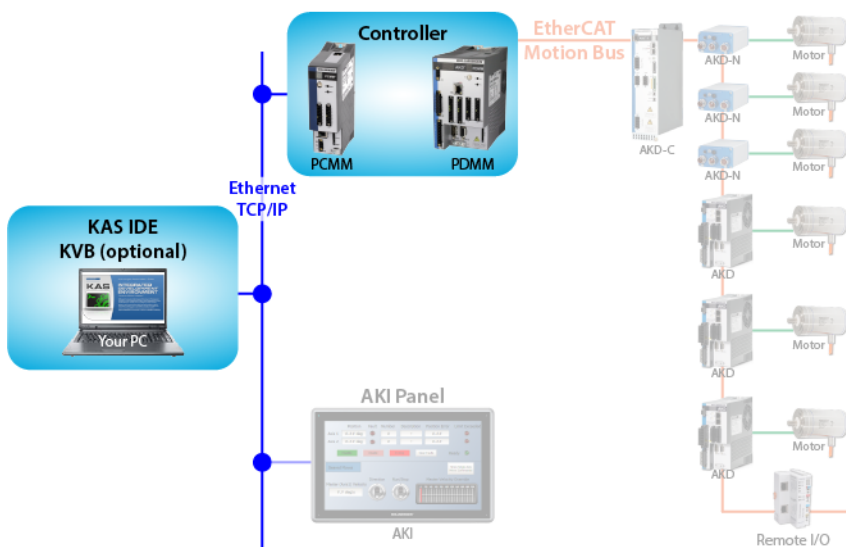


Figure 2-1: Software

## 2.2 Hardware Components

The KAS system is comprised of these hardware components.

Component	Models	Description
Controller	PCMM	<ul style="list-style-type: none"> <li>Standalone programmable controller.</li> <li>Provides a real-time platform with a PLC engine and motion engine to execute application programs and communicate with all network devices (e.g., remote I/O, drives, HMI, other PLCs, etc.)</li> </ul>
Controller + Drive	AKD PDMM	<ul style="list-style-type: none"> <li>Integrated programmable controller and servo drive.</li> <li>Provides a real-time platform with a PLC engine and motion engine to execute application programs and communicate with all network devices (e.g., remote I/O, drives, HMI, other PLCs, etc.)</li> </ul>
Drive	AKD AKD2G AKD-C AKD-N	Servo drives specifically designed with versatility, communications, and power to expand machine performance.
HMI	AKI AKI2G	Provides a graphical interface for the operator to manage the machine's operations.
Motor	AKM AKM2G	Servo motor is an actuator used for precise control of position, velocity, and acceleration by closing the control loop with a feedback device.
Remote I/O	AKT AKT2G	Digital and analog input and output signals . These signals provide sensor feedback and actuation between an automation system and the physical world.

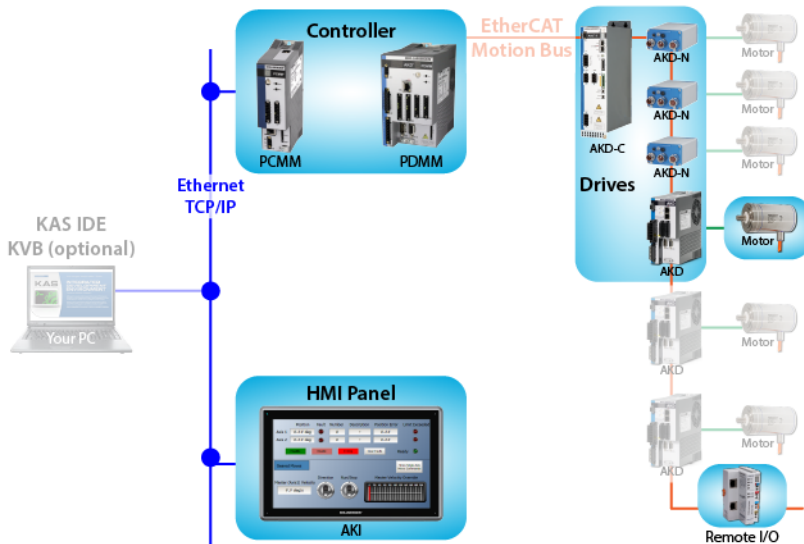


Figure 2-2: Hardware

## 3 Install KAS-IDE

### 3.1 System Requirements

These are the minimum system requirements for the KAS-IDE.

Element	Description
<b>Connectivity</b>	<ul style="list-style-type: none"> <li>1 Ethernet port, at either 100MB or 1GB.</li> <li>See Note #2.</li> </ul>
<b>Display</b>	<ul style="list-style-type: none"> <li>WXGA+ (1440 x 900) or higher-resolution monitor with 24-bit, 16.7M colors.</li> <li>See Note #1.</li> </ul>
<b>Memory</b>	1GB RAM (for 32-bit) or 2GB RAM (for 64-bit) or greater (recommended for complex applications).
<b>.NET Framework</b>	4.8.1
<b>Processor Type</b>	Intel® Pentium® M or equivalent processor at 1.5GHz or greater.
<b>Storage</b>	16GB (for 32-bit) or 20GB (for 64-bit) of free space on hard disk.
<b>Supported Operating Systems</b>	<ul style="list-style-type: none"> <li>Microsoft® Windows® 10 (32-bit or 64-bit).</li> <li>Microsoft® Windows® 11 (64-bit).</li> <li>For optimal performance, verify the operating system is fully updated with the latest patches.</li> </ul>
<b>Web Browser</b>	<ul style="list-style-type: none"> <li>A modern web browser is required to access the web server and online help.</li> <li>We recommend Microsoft Edge.</li> </ul>

#### NOTE

- Better results are achieved with OpenGL and 3D cards.
- A 100MB network is required to allow the KAS-IDE to Runtime communication to work in all conditions. The AKD WorkBench AutoTuner and Scope both require 100MB of bandwidth to function properly.

#### TIP

See [Connect Remotely](#) about the ports used by the KAS-IDE.  
The ports may need to be opened to support connecting from an external network.

### 3.2 Download

The latest version of the Kollmorgen Automation Suite is available from KDN.

See [Kollmorgen Support Network - Downloads](#) to download the latest or older versions.

#### NOTE

This is a restricted community.  
You must be given access based on having purchased KAS.  
If you do not have access, contact Kollmorgen support.



## 3.3 Installation Procedure

### ⓘ IMPORTANT

Installation of the KAS-IDE can require you to change your firewall setting.  
If you do not have sufficient privileges to configure your firewall, you must stop the relevant Windows Service.

Once KAS has finished downloading, complete these installation steps:

1. Double-click the **KAS-Setup.exe** file to run the installation Wizard.

#### NOTE

A Security Warning dialog displays as a result of security certification. Do not be alarmed.

2. Click **Run** to start the installation Wizard.
3. While the setup is loading, wait for the setup splash screen to vanish after being displayed. The Welcome Wizard displays with the version and build number of the KAS-IDE.
4. Click **Next** to continue.
5. Review the License Agreement and click **I Agree** to continue the installation.

#### NOTE

You must accept the agreement to install KAS.

6. Select the **Development Environment** installation type from the drop-down menu.

Installation Type	Description
<b>Development Environment</b>	This installation is typically used for creating and developing a new application. When you need to install the KAS-IDE and the KAS Runtime Simulator, select Development Environment as the type of installation.
<b>Custom</b>	You can manually select the specific KAS components to install.

7. Click **Next** to access the destination folder.
8. Accept the recommended default location or Click **Browse** to specify a custom install directory.
9. When finished, click **Install** to continue.

#### 👉 TIP

Kollmorgen strongly recommends accepting the default destination folder under C:\Program Files\Kollmorgen\Kollmorgen Automation Suite\Kollmorgen Automation Suite 4.02.X.X.

10. The software installation begins. Wait until the installation process is complete.
11. Click **Finish**.







#### 👉 TIP

- Adding the **KAS-IDE** application as an exception in your firewall settings is recommended to avoid security issues.

### 3.3.1 User Data

User-generated data such as log files, project sources, field bus configurations, function blocks, etc. are stored in the Windows® User directory and are maintained between installations. This applies to files on AKD PDMMs, PCMMs, and Simulator files.

### 3.4 Additional Literature

Document Title	Description	Download
<b>Release Notes</b>	<p>The KAS Release Notes contain a summary of:</p> <ul style="list-style-type: none"> <li>• New features, fixed and known limitations, workarounds</li> <li>• Information on all hardware and software components that have been updated, changed, or added in the release.</li> </ul>	
<b>Getting Started</b>	<p>Contains these main steps to get the KAS system up and running.</p> <ul style="list-style-type: none"> <li>• <b>Hardware (HW) Installation</b> (Connection and Wiring): Wiring and hardware details, connectors, system diagrams.</li> <li>• <b>HW Configuration</b>: Basic configuration and settings needed to start the HW components (e.g., HMI, Industrial PC, Fieldbus, I/O).</li> <li>• <b>Software (SW) Installation</b>: KAS software setup.</li> </ul>	
<b>30 Minutes to Motion</b>	<p>Contains the main topics to get started quickly with KAS-IDE. The objective is to familiarize you with the basic principles and the way the program works by creating a simple motion application project. This document contains information about:</p> <ul style="list-style-type: none"> <li>• Key Features <ul style="list-style-type: none"> <li>• See the Key Features in KAS.</li> </ul> </li> <li>• Explore the Workspace <ul style="list-style-type: none"> <li>• See Describing the KAS Graphical User Interface.</li> </ul> </li> <li>• Build a Motion Project <ul style="list-style-type: none"> <li>• Almost every task performed in KAS falls under one of these basic steps (which may not always be completed in this order): <ul style="list-style-type: none"> <li>• <b>Start Projects</b> - Create a project from scratch or modify an existing project. See Create a Project.</li> <li>• <b>Add Components</b> - Add necessary elements to build the project and control the motion part of the system. This includes: Create Variables, Adding Motion, and Programs: Structure and Syntax.</li> <li>• <b>Build Output</b> - Select a device and generate the application to deliver to users. See Run the Project.</li> <li>• <b>Run Output</b> - Make the output accessible to end-users.</li> </ul> </li> </ul> </li> </ul>	
<b>KAS-IDE User Manual</b>	Contains content to help with KAS-IDE except the topics included in the Reference Manuals.	
<b>Reference Manual - PLC Library</b>	Contains Technical References on <b>PLC</b> Programming Languages and Library.	
<b>Reference Manual - Motion Library</b>	Contains Technical References on <b>Motion</b> Library for Pipe Network and PLCopen.	

## 4 Installing KAS Runtime

The controller has all the necessary software installed (including KAS Runtime).

### NOTE

KAS Runtime is only supported with Kollmorgen controllers.

### 4.1 Update the Runtime on AKD PDMM and PCMM

The KAS Runtime is contained in the AKD PDMM and PCMM firmware and comes pre-installed.

This procedure is for updating the firmware and runtime using the KAS web server.

#### ⓘ IMPORTANT

The firmware files for "AKD PDMM and PCMM File Type: .IMG" (→ p. 11) are different than those for "PCMM2G File Type: .ZIP" (→ p. 12).

#### 4.1.1 AKD PDMM and PCMM File Type: .IMG

- **.IMG File Formats**
  - "AKD PDMM" (→ p. 11)
  - "PCMM" (→ p. 11)
- "Model Code" (→ p. 11)

##### 4.1.1.1 AKD PDMM

Controller	File Name Format	Example File Name
AKD PDMM	KAS-PDMM-M- <b>{Model-Code}</b> - <b>{Software-Version}</b> .img	KAS-PDMM-M- <b>K1EC-4.01.0.91992</b> .img

##### 4.1.1.2 PCMM

Controller	File Name Format	Example File Name
PCMM	KAS-PCMM-M- <b>{Model-Code}</b> - <b>{Software-Version}</b> .img	KAS-PCMM-M- <b>M2EC-4.01.0.91992</b> .img

##### 4.1.1.3 Model Code

Model Code	CPU Speed	Core
KCEC and MCEC	800MHz	Single
K1EC and M1EC	1.2GHz	Single
M2EC	1.2GHz	Dual

### 4.1.2 PCMM2G File Type: .ZIP

- **.ZIP File Formats**
  - "Operating System (OS) + KAS Runtime (RT)" (→ p. 12)
  - "OS Only" (→ p. 12)
  - "KAS Runtime (RT) Only" (→ p. 12)
- "Model Code" (→ p. 12)

#### 4.1.2.0.1 Operating System (OS) + KAS Runtime (RT)

- These files contain both the operating system and the KAS runtime.

Firmware File	File Name Format	Example File Name
Operating System (OS) + KAS Runtime (RT)	KAS-PCMM2G- <b>{Processor/RAM Code}</b> - <b>{Storage-Code}</b> - <b>{OS-Version}</b> - <b>{RT-Version}</b> .zip	KAS-PCMM2G- <b>Cx-08</b> -OS- <b>1.0.0.00288</b> -RT- <b>4.01.0.91998</b> .zip

#### 4.1.2.0.2 OS Only

- Operating system security update.
- These are provided as security patches.
- The KAS Runtime is not affected, but must not be less than a specific version.

Firmware File	File Name Format	Example File Name
OS Only	KAS-PCMM2G- <b>{Processor/RAM Code}</b> - <b>{Storage Code}</b> - <b>{OS-Version}</b> .zip	KAS-PCMM2G- <b>Cx-08</b> -OS- <b>1.0.0.00281</b> .zip

#### 4.1.2.0.3 KAS Runtime (RT) Only

- Unofficial runtime patch file.
  - These files are very small.
  - They may be sent to individual users when troubleshooting specific issues.

Firmware File	File Name Format	Example File Name
KAS Runtime (RT) Only	KAS-PCMM2G- <b>{Processor/RAM Code}</b> - <b>{Storage Code}</b> - <b>{RT-Version}</b> .zip	KAS-PCMM2G- <b>Cx-08</b> -RT- <b>4.01.0.91978</b> .zip

#### 4.1.2.1 Model Code

Processor / RAM / Storage Code	CPU Speed	Core	RAM	Storage
<b>Cx-08</b>	<b>1.5GHz</b>	<b>Quad</b>	<b>2 / 4 / 8GB</b>	<b>8GB</b>
<b>Cx-16</b>	<b>1.5GHz</b>	<b>Quad</b>	<b>2 / 4 / 8GB</b>	<b>16GB</b>
<b>Cx-32</b>	<b>1.5GHz</b>	<b>Quad</b>	<b>2 / 4 / 8GB</b>	<b>32GB</b>

## Procedure

1. Download the latest drive firmware and/or runtime firmware from [Kollmorgen.com](https://www.kollmorgen.com).
2. Open the controller's web server in your web browser by entering its IP address.
3. Select the **Settings** tabbed-page.
4. In the **Firmware** pane, click the **Choose File** button to select the new firmware image file for the KAS Runtime.

The recommended file is shown in the **Firmware Information** section.

Examples:

### AKD PDMM and PCMM

Firmware Information	
Firmware version	4.01.0.91992
Recommended file name	<code>KAS-PDMM-M-M1EC-{version}.img</code>

### PCMM2G

Firmware Information	
OS version	1.0.0.00281
Runtime version	4.01.0.91992
Recommended file name	<code>KAS-PCMM2G-Cx-08-OS-{OS version}-RT-{Runtime version}.zip</code>

5. Click **Upgrade** to start the procedure.

#### **TIP**

If the **Upgrade** button is disabled, log into the webserver.

Click **Login** at the top of the web page and enter the password.

A message and a throbber are shown across the web page, indicating that maintenance is in progress. The 7-segment display on the controller animates with chasing lights.

<b>Successful Upgrade</b>	<ul style="list-style-type: none"> <li>• The controller automatically reboots with new firmware.</li> <li>• Press <b>&lt;CTRL+F5&gt;</b> in the web browser to force a page refresh so the <b>Firmware Version</b> updates to the new version number.</li> </ul>
<b>Incompatible Firmware</b>	<p><b>Example: AKD PDMM and PCMM Error Message</b></p> <p>An error message, similar to this, appears if the wrong firmware file was downloaded:</p> <pre>The file provided is not compatible with this device. The file name should be... "KAS-PDMM-M-MCEC-{version}.img"</pre> <p><b>Example: PCMM2G Runtime Error Message</b></p> <pre>Minimum runtime version requirement not met.</pre>

6. After the download is complete, click **Reboot**.

A message and a throbber are shown over the web server while the reboot is in progress.

The login session is no longer valid when the reboot is complete.

The webserver displays a message to indicate the user has been logged out.

**NOTE**

This step is not necessary if the controller automatically reboots during the upgrade (previous step).

7. Press **<CTRL+F5>** to force the web browser to refresh the page.

**ⓘ IMPORTANT**

Do **not** try to refresh the web page until firmware upgrade is completed.

## 5 Install Hardware (HW)

Before a motion application can be up and running, all hardware components need to be connected, wired, and configured.


The **Getting Started** guide contains procedures for installing and configuring hardware components (e.g., HMI, controllers, I/O Terminals, EtherCAT Motion Bus, AKD2G Drive, and AKM2G Motor).

### NOTE




For extensive information about installing the different hardware components, see:


- [KAS.Kollmorgen.com](https://www.kollmorgen.com)
- KAS-IDE online help (after KAS has been installed)





This table has links to installation procedures for hardware components.


Domain	Product	Product Example Image	Concept (Technology)	Installation	Tasks (Tools)	Reference
Controller	AKD PDMM PCMM PCMM2G	 <p>The image shows three Kollmorgen controller units stacked vertically. The top unit is the AKD PDMM, the middle is the PCMM, and the bottom is the PCMM2G. Each unit has a blue front panel with various ports and labels.</p>	Programmable Drive Multi-axis Master: Controllers	<ul style="list-style-type: none"> <li>• Install the AKD PDMM, PCMM, or PCMM2G controller.</li> <li>• See "Install Controllers" (→ p. 21).</li> </ul>	<ul style="list-style-type: none"> <li>• Add the Controller</li> <li>• Configure the Controller</li> </ul>	Controllers

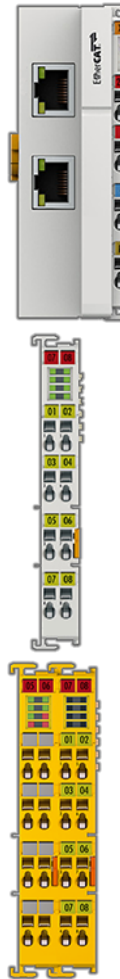

Domain	Product	Product Example Image	Concept (Technology)	Installation	Tasks (Tools)	Reference
Drives	AKD AKD-C AKD-N AKD2G S300 S700		<ul style="list-style-type: none"> <li>• <a href="#">AKD</a></li> <li>• <a href="#">AKD-C</a></li> <li>• <a href="#">AKD-N</a></li> <li>• <a href="#">AKD2G</a></li> <li>• <a href="#">S300</a></li> <li>• <a href="#">S700</a></li> </ul>	<ul style="list-style-type: none"> <li>• Install a AKD or AKD2G Drive.</li> <li>• See either the: <ul style="list-style-type: none"> <li>• AKD Installation Manual</li> <li>• AKD Quick Start</li> </ul> </li> <li>• Available from: <a href="#">AKD Downloads</a>.</li> </ul>	<ul style="list-style-type: none"> <li>• Add and Configure a Servo Drive</li> <li>• AKD Drive Configuration</li> <li>• "Download AKD PDMM Drive Firmware" (→ p. 26)</li> <li>• "AKD/AKD2G Firmware Update" (→ p. 27)</li> </ul>	Drives
Fieldbus	EtherCAT		<a href="#">EtherCAT</a>	<ul style="list-style-type: none"> <li>• Set up EtherCAT Motion Bus Communication.</li> <li>• See <a href="#">AKD®EtherCAT Communication</a>.</li> </ul>	Configure EtherCAT Motion Bus	Motion Bus and Fieldbuses Cables
HMI	Human-Machine Interface			<ul style="list-style-type: none"> <li>• Install the graphic operator interface.</li> <li>• See "HMI - Graphic Operator Interface" (→ p. 21).</li> </ul>	<ul style="list-style-type: none"> <li>• Using Kollmorgen Visualization Builder</li> <li>• Add an HMI Device</li> </ul>	HMI








Domain	Product	Product Example Image	Concept (Technology)	Installation	Tasks (Tools)	Reference
I/O Terminal			EtherCAT	<ul style="list-style-type: none"> <li>• Install the remote Input/Output Terminal.</li> <li>• See "Remote Input/Output - I/O Terminal" (→ p. 22).</li> </ul>	<ul style="list-style-type: none"> <li>• Add and Configure I/O Slices</li> <li>• Map Input and Output to Variables</li> </ul>	Remote Input/Output Terminals

Domain	Product	Product Example Image	Concept (Technology)	Installation	Tasks (Tools)	Reference
Mechanical						<a href="#">Linear Actuators</a> <a href="#">Gearheads</a>
Motion Engines			<p>Motion Concept:</p> <ul style="list-style-type: none"> <li>• Pipe Network Concept</li> <li>• PLCopen®</li> </ul>		<ul style="list-style-type: none"> <li>• <a href="#">Design Pipe Network</a></li> <li>• <a href="#">Pipe Network Editor</a></li> <li>• <a href="#">Create Cam Profile</a></li> <li>• <a href="#">Cam Profile Editor</a></li> <li>• <a href="#">Softscope</a></li> </ul>	
Motors	AKM AKM2G		Kollmorgen Servomotor	<ul style="list-style-type: none"> <li>• Install the AKM or AKM2G Motor.</li> <li>• Mechanical and Electrical installation.</li> <li>• Available from: <ul style="list-style-type: none"> <li>• <a href="#">AKM Downloads</a></li> <li>• <a href="#">AKM2G Downloads</a></li> </ul> </li> </ul>		<ul style="list-style-type: none"> <li>• AKM</li> <li>• AKM2G</li> <li>• Cartridge DDR</li> <li>• Direct Drive Linear</li> <li>• Housed DDR</li> <li>• KBM</li> <li>• TBM</li> </ul>
PLC			IEC 61131-3		<ul style="list-style-type: none"> <li>• Free Form Ladder Diagram (FFLD) Editor</li> <li>• Function Block Diagram (FBD) Editor</li> <li>• Sequential Function Chart (SFC) Editor</li> <li>• Soft Oscilloscope (Softscope)</li> <li>• Structured Text (ST) / Instruction List (IL) Editor</li> <li>• Variables tab for Dictionary</li> </ul>	<ul style="list-style-type: none"> <li>• FBD Language</li> <li>• FFLD Language</li> <li>• IL Language</li> <li>• SFC Language</li> <li>• ST Language</li> </ul>

Domain	Product	Product Example Image	Concept (Technology)	Installation	Tasks (Tools)	Reference
Safety			Safety over EtherCAT	"SafePLC2 Projects" (→ p. 25)	<ol style="list-style-type: none"> <li>"SafePLC2 Projects" (→ p. 25)</li> <li>Set Up a Variable to Monitor Safety Data</li> <li>AKD2G Safety Parametrization Using FSoE with SCU-1-EC and PxMM / PCMM2G</li> <li>Set Up FSoE Master and an AKD2G with SafeMotion Monitor</li> </ol>	<ul style="list-style-type: none"> <li>BBH FSoE Master</li> <li>Related Documents</li> <li>AKT2G-SDI-004-000</li> <li>AKT2G-SDO-004-000</li> </ul>

## 5.1 HMI - Graphic Operator Interface




This is a list of HMI available component:

HMI Part Number	Description	KVB	Manual
AKI-CDC-MOD-21T-000	Graphical Display 21.5" TFT LCD, Touchscreen	v2.0	
AKI-CDC-MOD-15T-000	Graphical Display 15.4" TFT LCD, Touchscreen	v2.0	
AKI-CDC-MOD-12T-000	Graphical Display 12.1" TFT LCD, Touchscreen	v2.0	
AKI2G-CDA-MOD-07T-000	Graphical Display 5" TFT LCD, Touchscreen	v2.20	
AKI2G-CDA-MOD-05T-000	Graphical Display 7" TFT LCD, Touchscreen	v2.20	
AKI2G-CDB-MOD-12T-000	Graphical Display 12" TFT LCD, Touchscreen	v2.20	
AKI2G-CDB-MOD-07T-000	Graphical Display 7" TFT LCD, Touchscreen	v2.20	

See the [Kollmorgen Support Network](#) for specifications and Technical Manuals.

## 5.2 Install Controllers

The controller installation information is found here:

Document Title	Description	Manual
<b>AKD PDMM Installation Manual</b>	<ul style="list-style-type: none"> <li>Covers the most important points to install the drive hardware and software.</li> <li>Provides instructions for basic drive setup and connection to a network.</li> </ul>	
<b>PCMM Installation Manual</b>	Covers the most important points of the installation and setup of the controller.	
<b>PCMM2G Installation Manual</b>	Covers the most important points of the installation and setup of the controller.	

## 5.3 EtherCAT Motion Bus

One EtherCAT master must be connected with all the slaves (drives and I/O terminals) of your system. Details about the installation procedure for the EtherCAT Motion Bus are here:

- AKD2G: Website - [Installation and Setup](#)
  - Click **Apply** to set the Fieldbus filters on the website.
- AKD: Website - [Download - AKD EtherCAT Communications Manual](#)
  - Select the PDF from the list.

## 5.4 Remote Input/Output - I/O Terminal

This is a list of available I/O components.

See the AKT2G I/O Manual or the online help for detailed information on setting up I/O.

I/O Terminal Part Number	I/O Terminal Description
AKT2G-AC-FAN-001	Fan cartridge for EtherCAT and Bus Terminals.
AKT2G-AN-240-000	<ul style="list-style-type: none"> <li>2-channel input terminal PT100 (RTD) for resistance sensors.</li> <li>16-bit, 2-, 3-wire system.</li> </ul>
AKT2G-AN-400-000	<ul style="list-style-type: none"> <li>4-channel thermocouple input terminal.</li> <li>Preset to type K, with wire breakage detection.</li> <li>16-bit</li> </ul>
AKT2G-AN-430-000	<ul style="list-style-type: none"> <li>4-channel analog input.</li> <li>Parameter capable</li> <li>-10/0 to 10V</li> <li>-20/0/+4 to +20mA</li> <li>16-bit</li> </ul>
AKT2G-AT-410-000	<ul style="list-style-type: none"> <li>4-channel analog output terminal.</li> <li>0 to 10V</li> <li>1-wire system</li> <li>12-bit</li> </ul>
AKT2G-AT-425-000	<ul style="list-style-type: none"> <li>4-channel analog output terminal.</li> <li>-10V to +10V</li> <li>4 x 2-wire system</li> <li>12-bit</li> </ul>
AKT2G-BRC-000-000	Brake Chopper Terminal
AKT2G-DN-002-000	<ul style="list-style-type: none"> <li>Up/down counter <math>24V_{DC}</math></li> <li>100 kHz</li> <li>32-bit counter depth</li> </ul>
AKT2G-DN-008-000	<ul style="list-style-type: none"> <li>8-channel digital input terminal <math>24V_{DC}</math>.</li> <li>Filter 3.0ms</li> <li>1-wire system</li> </ul>
AKT2G-DNH-008-000	<ul style="list-style-type: none"> <li>8-channel digital input terminal <math>24V_{DC}</math>.</li> <li>Filter 10<math>\mu</math>s</li> <li>1-wire system</li> </ul>
AKT2GJ-DT-008-000	<ul style="list-style-type: none"> <li>8-channel digital output terminal <math>24V_{DC}</math></li> <li>0.5A</li> <li>1-wire system</li> </ul>
AKT2G-ECT-000-000	EtherCAT Coupler for E-bus terminals
AKT2G-EM-000-000	<ul style="list-style-type: none"> <li>Bus end cover for E-bus terminals</li> <li>Cover for power and E-bus contacts, gray</li> </ul>
AKT2G-ENC-180-000	<ul style="list-style-type: none"> <li>1-channel incremental encoder interface</li> <li>32-bit</li> </ul>
AKT2G-ENC-190-000	<ul style="list-style-type: none"> <li>Incremental encoder interface with differential input</li> <li>16-bit / 32-bit</li> </ul>

I/O Terminal Part Number	I/O Terminal Description
AKT2G-PSF-024-000	<ul style="list-style-type: none"> <li>• Power supply terminal with fuse</li> <li>• 24V<sub>DC</sub></li> </ul>
AKT2G-SDI-004-000	<ul style="list-style-type: none"> <li>• 4-channel digital input terminal 24V<sub>DC</sub>.</li> <li>• Safety</li> </ul>
AKT2G-SDO-004-000	<ul style="list-style-type: none"> <li>• 4-channel digital input terminal 24V<sub>DC</sub>.</li> <li>• Safety</li> <li>• 0.5A</li> </ul>
AKT2G-SM-L15-000	<ul style="list-style-type: none"> <li>• Stepper motor terminal</li> <li>• 24V<sub>DC</sub></li> <li>• 1.5A</li> <li>• Vector control</li> </ul>
AKT2G-SM-L50-000	<ul style="list-style-type: none"> <li>• Stepper motor terminal</li> <li>• 50V<sub>DC</sub></li> <li>• 5A</li> <li>• Vector control</li> </ul>

## 5.5 Install AKD Drives

Drive Manuals	Description
<a href="#">AKD EtherCAT Manual</a>	Describes the installation, setup, range of functions, and software protocol for the EtherCAT AKD product series.
<a href="#">AKD Installation Manual</a>	<ul style="list-style-type: none"> <li>• Installation manual for AKD and AKD PDMM drives.</li> <li>• Describes the AKD series of digital drives and includes mechanical, electrical, and software installation information needed to safely install AKD.</li> </ul>
<a href="#">AKD PDMM Fault Card</a>	<ul style="list-style-type: none"> <li>• Describes the AKD PDMM (including AKD) faults, warnings, error messages, and alarms.</li> <li>• Provides cause and remedy instructions to determine the specifics of the failure and to correct the underlying problem.</li> </ul>
<a href="#">AKD PDMM User Manual</a>	<ul style="list-style-type: none"> <li>• Describes the software installation, setup, and operation for the AKD PDMM drive.</li> <li>• Includes basic topics and examples to help set up and use the various features in the drive.</li> </ul>
<a href="#">AKD, AKD2G, S700 (in NA) Accessories Manual</a>	Describes the accessories for Kollmorgen digital drive systems and servo drive motors.
<a href="#">AKD2G EtherCAT Manual</a>	Describes the installation, setup, range of functions, and software protocol for the AKD2G product series.
<a href="#">AKD2G Installation Manual</a>	<ul style="list-style-type: none"> <li>• Describes the AKD2G series of digital drives.</li> <li>• Includes mechanical, electrical, software, and functional safety options.</li> </ul>
<a href="#">MKD Installation Manual</a>	<ul style="list-style-type: none"> <li>• Installation manual for MKD-N power supply and MKD-C drives.</li> <li>• Describes the MKD devices and includes mechanical, electrical, and software installation information needed to safely install the devices.</li> </ul>
<a href="#">S300 Reference Documentation</a>	Kollmorgen website with access to all S300 manuals.
<a href="#">S700 Reference Documentation</a>	Kollmorgen website with access to all S700 manuals.

## 5.6 Install AKM or AKM2G Motors


See either the [AKM Instructions Manual](#) or the [AKM2G Installation Manual](#).



## 5.7 SafePLC2 Projects

A node can be added to the Project tree connected to a [SafePLC2](#) project.

- This is used to synchronize a SafePLC2 project with a KAS project.
- The KAS-IDE automatically generates the PDOs for the connected devices and establishes the Black Channel with the EtherCAT Safety network.

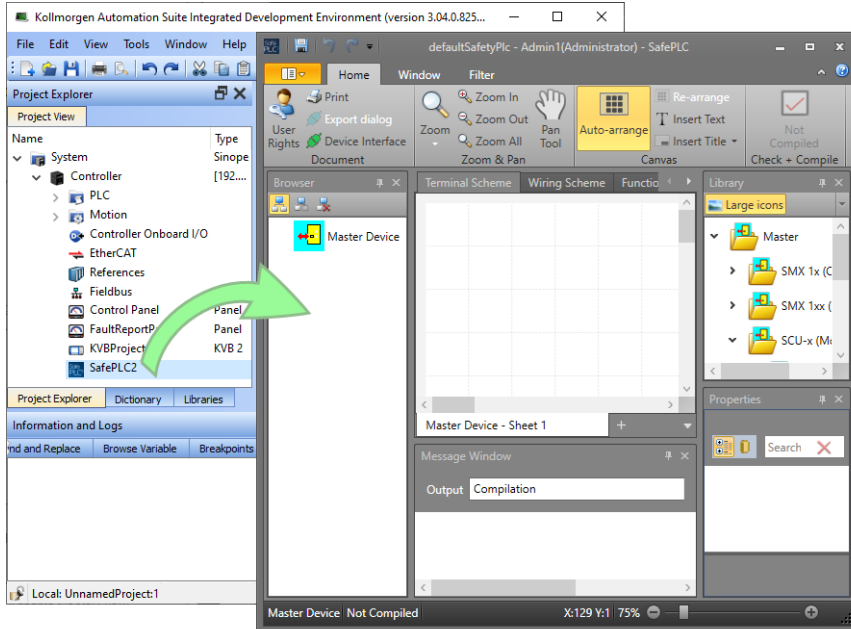

See the online help or the AKT2G I/O Manual for more information.

## 6 Updating Firmware

Check the KAS software Release Notes to find the AKD PDMM firmware version that matches your KAS software version. The latest version of the firmware can be downloaded from the [Kollmorgen website](#).

To ensure your installation is correct, you have to:


1. Check the current AKD or AKD2G drive firmware.
2. Download the official version, if necessary.
3. Update the firmware.

### 6.1 Check AKD / AKD2G Drive Firmware with KAS-IDE

1. Create a new project.
2. Set the controller type and IP address.
3. In the Project Explorer, double-click the **EtherCAT** node to open the EtherCAT Devices summary window.
4. In the Devices tab, click the **Scan Devices** button.
5. Choose the **Create...** option to map the physical device to a new device.



#### NOTE

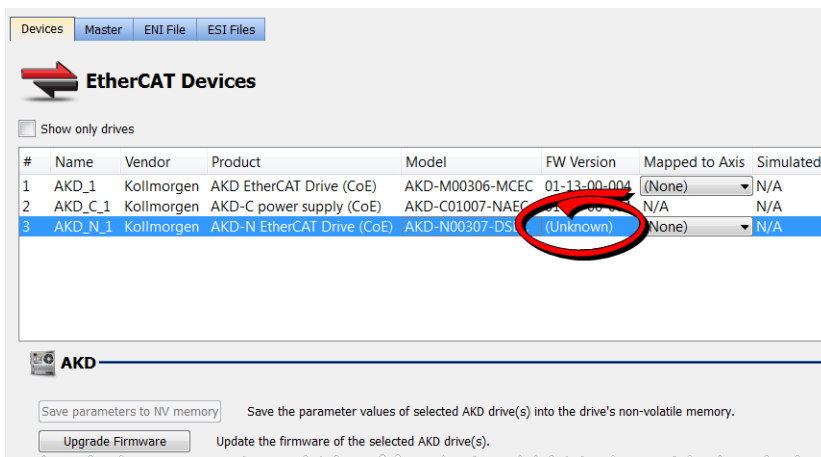If a Kollmorgen drive is showing the firmware version as "Unknown", the drive has valid resident firmware (from which to boot), but does not have valid operational firmware. Download and install the latest operational firmware and reboot the AKD / AKD2G.



6. If the version is not correct, continue with this procedure:
7. Compile the project.
8. Connect to the controller.
9. Download the project to the controller.
10. If the version is not correct, download the new firmware from the [Media & Downloads](#) website.
11. Continue with "Download AKD PDMM Drive Firmware" (→ p. 26).

### 6.2 Download AKD PDMM Drive Firmware

Component	Title	Download Link
800MHz AKD PDMM Drive FW	AKD PDMM Servo Drive Firmware (AKD-M-MCEC-[firmware version])	
1.2GHz AKD PDMM Drive FW	AKD PDMM Servo Drive Firmware (AKD-M-M1EC-[firmware version])	


## 6.2.1 Update the AKD PDMM Drive Firmware with KAS-IDE

1. In the toolbar, deactivate the Online Configuration Mode.
2. Select the drives requiring the same firmware version to be updated.

### TIP

The firmware download is limited to 16 drives at a time.

3. Click the **Upgrade Firmware** button.

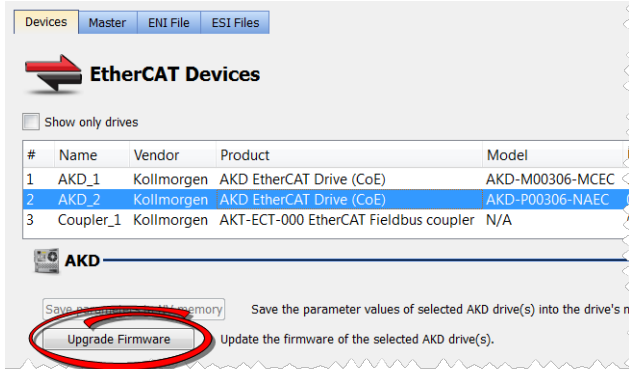

### IMPORTANT

Warning dialogs may appear at this point. These warnings include important information about preventing damage to the drives.

4. Browse to the new AKD/AKD2G firmware file. See the Release Notes for the latest supported firmware.
5. Click **Open** to start the updating procedure.

### NOTE

This procedure is not possible when applications are running and when the drive is in Online Configuration Mode.

## 6.3 AKD/AKD2G Firmware Update

Based on the File Access over EtherCAT (FoE) protocol, the AKD / AKD2G drive Firmware can be downloaded:

1. Scan the devices and make sure all devices are created.
2. Compile the project.
3. Connect to the controller.
4. Download the project to the controller.
5. Open the **EtherCAT Devices** summary form.
6. Select the drives requiring the same firmware version to be updated.
  - Multiple drives of the same type can be selected. This allows the same firmware file to be downloaded to the selected drives simultaneously.
  - **AKD-C**: Devices with the product description "AKD-C String 2" do not support firmware download.


The screenshot shows the 'EtherCAT Devices' window with a table of drives. The 'AKD-C String 2' product is circled in red.

#	Name	Vendor	Product	Model	FW Version	Mapped to Axis	Simulated
1	AKD_1	Kollmorgen	AKD EtherCAT Drive (CoE)	AKD-M00306-MCEC-0000	01-14-00-002	(None)	N/A
2	AKD_C_1	Kollmorgen	AKD-C String 1 / Power supply/IO (CoE)	AKD-C00000-CBEC-E000	(Unknown)	N/A	N/A
3	AKD_N_1	Kollmorgen	AKD-N EtherCAT Drive (CoE)	AKD-N00307-DFEC-E000	01-14-00-002	(None)	N/A
4	AKD_C_2	Kollmorgen	AKD-C String 2	AKD-C00000-CBEC-0000	(Unknown)	N/A	N/A
5	AKD_N_2	Kollmorgen	AKD-N EtherCAT Drive (CoE)	AKD-N00307-DFEC-0000	01-14-00-002	(None)	N/A
6	AKD_N_3	Kollmorgen	AKD-N EtherCAT Drive (CoE)	AKD-N00307-DSEC-0000	01-14-00-002	(None)	N/A

- **AKD-N**: The last four characters can be different. However, the firmware file selected to download must support all the selected models. The file `AKD-N-xxEC-*****.i00` supports multiple AKD-N models.

- **AKD-P:** The last four letters of the model number must be the same for simultaneous firmware download.

7. Click the **Upgrade Firmware** button.

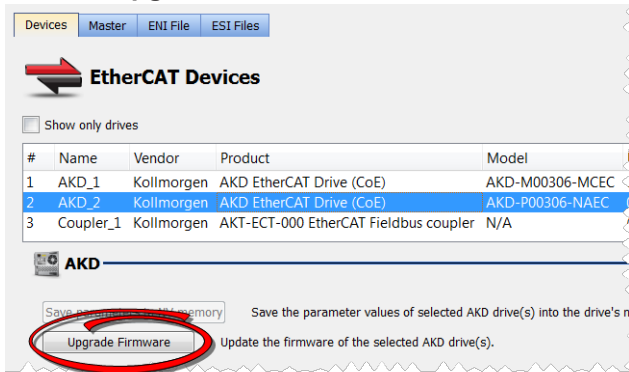

### ⓘ IMPORTANT

Warning dialogs may appear at this point.

These warnings include important information about preventing damage to the drives.

8. Browse to the new AKD/AKD2G firmware file.  
See the Release Notes for the latest supported firmware.
9. Click **Open** to start the updating procedure.

### NOTE

This procedure is not possible when applications are running and when the drive is in Online Configuration Mode.

During the firmware download, the AKD/AKD2G Firmware Update window displays a progress bar and these messages are displayed:

- Uploading firmware to the drive.
  - During the download process, the drive LED displays [dL].
  - Additional codes may appear during the download.
    - See either AKD or AKD2G Display Codes for a description of codes related to the firmware download.
- Resetting the drive.
- Firmware update is complete.

### ⚠ CAUTION

While the firmware is downloading to your drive, **do not** remove the 24V logic power.

If you remove the 24V logic power during a firmware download, a severe drive crash can occur.

If a crash occurs, the drive will restart in a special mode and prompt you to reload the firmware.

### ⓘ IMPORTANT

An AKD drive executing the resident firmware is detected as a different device than an AKD or AKD2G drive executing the operational firmware.

Re-scan the network and compile it if a drive's executed firmware has changed since the last scan.

### 👉 TIP

Power cycling is recommended after completing the update for all drives.

## 7 Installing Kollmorgen Visualization Builder

Kollmorgen Visualization Builder (KVB) is used to design HMI running on AKI panels.

KVB is an optional feature that is only included in some licenses.

### NOTE

Kollmorgen Visualization Builder contains these two installation packages:

- Kollmorgen Visualization Builder(KVB IDE) for development PC
- Visualizer RT (KVB RT) for AKI panel runtime

### 7.1 Download

Component	Version
<a href="#">Latest Version of Kollmorgen Visual Builder</a>	v.2.40 [2.43.17.0]
<a href="#">Visualizer RT (KVB RT)</a>	v.2.40 [2.43.17.0]

### 7.2 Installation Procedure

These programs automatically install during the KVB installation.

- Microsoft .NET Compact Framework 3.5
- Microsoft SQL Server Compact 3.5
- Microsoft Visual C++ 2013 - Redistributable Setup


Once Kollmorgen Visualization Builder has finished downloading, complete these installation steps:

1. Double-click the **Setup.exe** file to run the installation Wizard.

### NOTE


If KVB was already installed and you want to update to a new version, then running **NeoSetup.msi** is enough.

2. Select the check box to accept the License agreement and click **Next** to start installing **Kollmorgen Visualization Builder**.
3. Select where you want to install **Kollmorgen Visualization Builder** and the application language, then click **Next**.

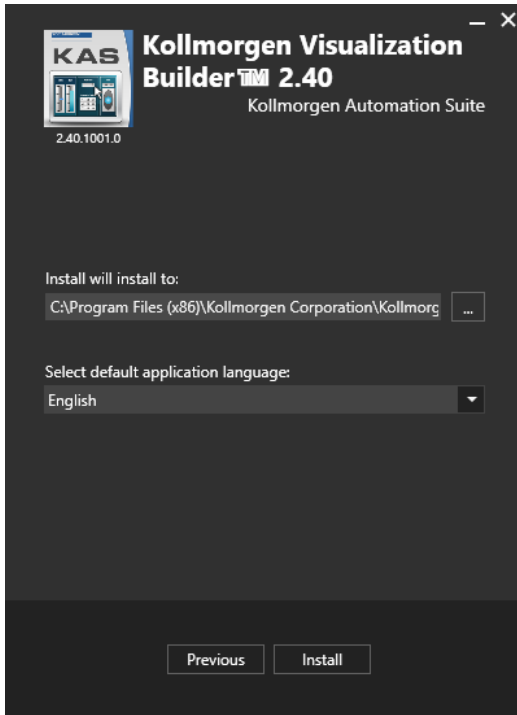

Kollmorgen strongly recommends accepting the default destination folder under `C:\Program Files (x86)\Kollmorgen\Kollmorgen Visualization Builder\`.

4. Click **Install** to start **Kollmorgen Visualization Builder** installation.

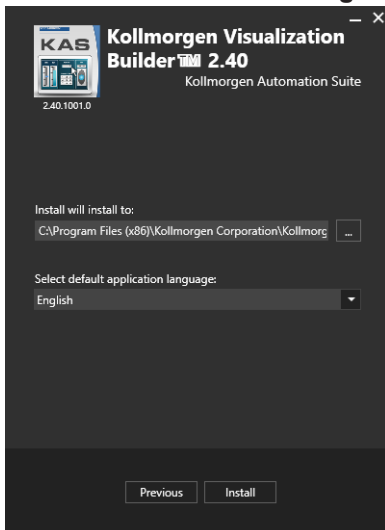

5. Click **Close** or to start using KVB right away, click **Launch**.

KVB Manuals	Description
<a href="#">Kollmorgen Visualization Builder™ Quick Start Guide</a>	The Quick Start covers these important points to: <ul style="list-style-type: none"> <li>• Install and use Kollmorgen Visualization Builder.</li> <li>• Configure HMI Panels and PC operated control applications.</li> </ul>
<a href="#">Kollmorgen Visualization Builder™ User Manual</a>	Contains all the content to help with Kollmorgen Visualization Builder.

## 8 Finalize Installation

Optional: To complete the KAS installation, either:

- Test the system.
- Create a backup image.

### 8.1 Test the Installation

To conclude the installation, the whole system has to be tested.

A test could be done with the standard Two-Axis Template that corresponds to a simple application.

See the KAS **30 Minutes to Motion** User Manual.

## 9 Troubleshooting

Faults occur for a variety of reasons, depending on the conditions in your installation.

The causes of faults in multi-axis systems can be especially complex.

### **TIP**

Find more information here:

- The **Troubleshooting** section in the online help.
- The **Faults and Warnings** section of the online help.
- Search the Kollmorgen Developer Network (KDN) at [www.kollmorgen.com/developer-network](http://www.kollmorgen.com/developer-network) for answers or submit a question.



# Support and Services

## About Kollmorgen

When you need motion and automation systems for your most demanding applications and environments, count on Kollmorgen - the innovation leader for more than 100 years. We deliver the industry's highest-performing, most reliable motors, drives, AGV control solutions and automation platforms, with over a million standard and easily modifiable products to meet virtually any motion challenge. We offer manufacturing facilities, distributors and engineering expertise in all major regions around the world, so you can bring a better machine to market faster and keep it profitable for many years to come.

## Kollmorgen Developer Network



Join the [Kollmorgen Support Network](#) for product support.

Ask the community questions, search the knowledge base for answers, get downloads, and suggest improvements.



## Kollmorgen Support Locations

### North America

#### Kollmorgen

201 West Rock Road  
Radford, VA 24141, USA

**Web:** [www.kollmorgen.com](http://www.kollmorgen.com)  
**Email:** [support@kollmorgen.com](mailto:support@kollmorgen.com)  
**Tel.:** +1-540-633-3545  
**Fax:** +1-540-639-4162

### Europe

#### Kollmorgen Europe GmbH

Pempelfurtstr. 1  
40880 Ratingen, Germany

**Web:** [www.kollmorgen.com](http://www.kollmorgen.com)  
**Email:** [technik@kollmorgen.com](mailto:technik@kollmorgen.com)  
**Tel.:** +49-2102-9394-0  
**Fax:** +49-2102-9394-3155

### South America

#### Altra Industrial Motion do Brasil

Equipamentos Industriais LTDA.  
Avenida João Paulo Ablas, 2970  
Jardim da Glória, Cotia – SP  
CEP 06711-250, Brazil

**Web:** [www.kollmorgen.com](http://www.kollmorgen.com)  
**Email:** [contato@kollmorgen.com](mailto:contato@kollmorgen.com)  
**Tel.:** (+55 11) 4615-6300

### China and SEA

#### KOLLMORGEN

Room 302, Building 5, Libao Plaza,  
88 Shenbin Road, Minhang District,  
Shanghai, China.

**Web:** [www.kollmorgen.cn](http://www.kollmorgen.cn)  
**Email:** [sales.china@kollmorgen.com](mailto:sales.china@kollmorgen.com)  
**Tel.:** +86-400 668 2802